




Assembly Instructions

For Item #'s: PHF11 & PHF22

Plastic Hanging Feeder


Step 1

Your feeder should arrive complete with a red base, a white tube and a poly bag containing the axle rod assembly.

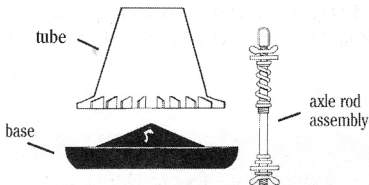


Step 2

Open the poly bag. Unthread the parts shown and set aside.

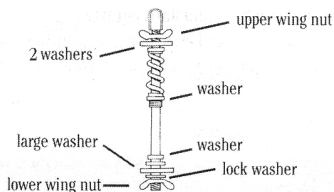


Step 3

Slide axle rod assembly (spring side up) through the small hole in the base of the feeder.

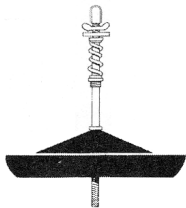


Step 4

Attach the large washer, lock washer, and lower wing nut to the underside of the base as shown. Next, thread the wing nut to secure the parts.

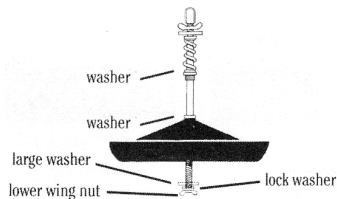


Step 5

Place the white tube over the axle rod assembly. Slide the axle assembly through the small hole at the top of the tube.

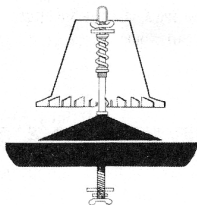

Step 6

Attach the washer and upper wing nut as shown (you may need to apply some pressure to compress the spring). Twist the wing nut to tighten the entire assembly.

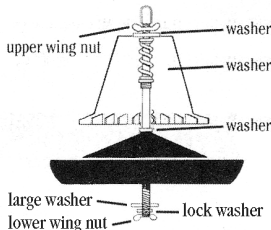

Adjusting the feed level:
Twist the top wing nut to control the level of feed release into the base.




Assembly Instructions

For Item #: PHF3

Plastic Hanging Feeder


Step 1

Your feeder should arrive complete with a red base, a white tube and a poly bag containing the axle rod assembly.

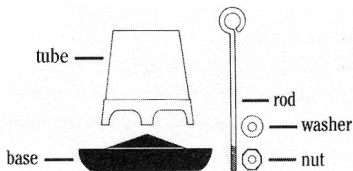

Step 2

Place the washer on the rod, then place the rod through the tube and the base.

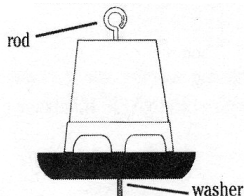

Step 3

Screw the nut on the end of the rod to secure the tube to the base.

